



No.	Order No.	Description	No.	Order No.	Description
1	32-B 015	Side handle	26	48-L 919	Carbon brush
2	48-L 069	Gear housing	27	48-L 079	Slider
3	48-K 340	Hex nut	28	48-L 094	Switch rod
4	48-L 070	Pinion/crown wheel unit	29	48-M 366	Cable clamp
5	48-K 203	Spacer ring	31	48-S 744	Screw
6	48-Q 259	Ball bearing	32	48-L 096	Housing cover
7	48-L 071	Flange	33	48-L 083	Cable sleeve
8	48-L 091	Armature	34	48-Z 201	Cord set
9	48-Q 027	Ball bearing	35	48-L 195	Field
10	48-L 090	Bearing seat	36	48-L 139	Motor housing
11	48-L 092	Vent plate	38	48-L 086	Brush assembly
12	48-S 714	Screw	41	48-L 141	Switch
13	48-L 074	Clutch assembly	43	48-L 099	Fan
15	48-K 163	Spacer	45	48-K 204	Spacer
16	48-L 933	Intermediate plate	46	48-M 404	Sealing flange
17	48-L 194	Gear flange	47	48-L 193	Push button
18	48-S 510	Screw	48	48-M 425	Spring
19	48-L 077	Grinding spindle	49	48-K 110	Washer
21	30-B 020	Quick nut	50	48-M 426	Locking pin
22	30-B 037	Clamp nut (manual operation)	51	48-L 919	Carbon brush
23	48-M 218	Safety guard	55	48-S 101	Screw
24	48-S 013	Screw	57	48-M 431	Spacer
25	48-L 651	Spacer	59	48-K 202	Spacer