



<u>No.</u>	<u>Order No.</u>	<u>Description</u>
1	32-B 015	Side handle
2	48-L 069	Gear housing
3	48-K 340	Hex nut
4	48-L 070	Pinion/Crown wheel unit
5	48-K 430	Spacer ring
6	48-Q 134	Ball bearing
7	48-L 071	Flange
8	48-L 072	Armature
9	48-Q 004	Ball bearing
10	48-L 090	Bearing seat
11	48-L 073	Vent plate
12	48-S 714	Screw
13	48-L 074	Clutch assembly
14	48-L 075	Spacer
15	48-K 163	Spacer
16	48-L 933	Intermediate plate
17	48-L 076	Gear flange
18	48-S 510	Screw
19	48-L 077	Grinding spindle
20	48-S 553	Screw
21	30-B 020	Quick nut
	03-B 037	Clamp nut (manual operation)

<u>No.</u>	<u>Order No.</u>	<u>Description</u>
22	30-B 036	Flange
23	48-L 078	Safety guard
24	48-K 651	Spacer
25	48-K 410	Nut
26	48-L 079	Slider
27	48-L 080	Switch rod
28	48-L 919	Carbon brush
30	48-M 366	Cable clamp
31	48-L 081	Lead
32	48-S 744	Screw
33	48-L 082	Housing cover
34	48-L 083	Cable sleeve
35	48-Z 201	Cord set
36	48-L 084	Field
37	48-L 085	Motor housing
39	48-L 086	Brush assembly
39a	48-L 919	Carbon brush
40	48-L 087	Lead
41	48-L 088	Lead
42	48-L 089	Switch
45	48-L 093	Spacer
46	48-L 099	Fan
47	48-L 918	Insulating sleeve