



| <u>No.</u> | <u>Order No.</u> | <u>Description</u> | <u>No.</u> | <u>Order No.</u> | <u>Description</u> |
|------------|------------------|------------------------------|------------|------------------|--------------------|
| 1 | 32-B 015 | Side handle | 23 | 48-L 078 | Safety guard |
| 2 | 48-L 069 | Gear housing | 24 | 48-K 651 | Spacer |
| 3 | 48-K 340 | Hex nut | 25 | 48-K 410 | Nut |
| 4 | 48-L 070 | Pinion/Crown wheel unit | 26 | 48-L 079 | Slider |
| 5 | 48-K 430 | Spacer ring | 27 | 48-L 080 | Switch rod |
| 6 | 48-Q 134 | Ball bearing | 30 | 48-M 366 | Cable clamp |
| 7 | 48-L 071 | Flange | 32 | 48-S 744 | Screw |
| 8 | 48-M 390 | Armature | 33 | 48-L 082 | Housing cover |
| 9 | 48-Q 004 | Ball bearing | 34 | 48-L 083 | Cable sleeve |
| 10 | 48-L 090 | Bearing seat | 35 | 48-Z 201 | Cord set |
| 11 | 48-L 073 | Vent plate | 36 | 48-L 084 | Field |
| 12 | 48-S 714 | Screw | 37 | 48-L 085 | Motor housing |
| 13 | 48-L 074 | Clutch assembly | 39 | 30-L 086 | Brush assembly |
| 14 | 48-L 075 | Spacer | 42 | 48-L 089 | Switch |
| 15 | 48-K 163 | Spacer | 45 | 48-L 093 | Spacer |
| 16 | 48-L 933 | Intermediate plate | 46 | 48-L 099 | Fan |
| 17 | 48-L 076 | Gear flange | 48 | 48-M 431 | Spacer ring |
| 18 | 48-S 510 | Screw | 49 | 48-L 193 | Push button |
| 19 | 48-L 077 | Grinding spindle | 50 | 48-M 425 | Spring |
| 20 | 48-S 553 | Screw | 51 | 48-K 110 | Washer |
| 21 | 30-B 020 | Quick nut | 52 | 48-M 426 | Locking pin |
| | 03-B 037 | Clamp nut (manual operation) | 53 | 48-L 919 | Carbon brush |
| 22 | 30-B 036 | Flange | 55 | 48-K 202 | Spacer ring |