



No.	Order No.	Description
1	32-B 015	Side handle
2	48-L 069	Gear housing
3	48-K 340	Hex nut
4	48-L 070	Pinion/Crown wheel unit
5	48-K 430	Spacer ring
6	48-Q 259	Ball bearing
7	48-L 071	Flange
8	48-L 231	Armature
9	48-Q 260	Ball bearing
10	48-L 090	Bearing seat
11	48-L 073	Vent plate
12	48-S 714	Screw
13	48-L 074	Clutch assembly
14	48-L 075	Spacer
15	48-K 163	Spacer
16	48-L 933	Intermediate plate
17	48-L 194	Gear flange
18	48-S 510	Screw
19	48-L 077	Grinding spindle
20	48-S 553	Screw
21	30-B 020	Quick nut
22	03-B 037	Clamp nut (manual operation)
23	30-B 036	Flange
24	48-L 214	Safety guard

No.	Order No.	Description
24	48-L 651	Spacer
26	48-L 079	Slider
27	48-L 080	Switch rod
30	48-M 366	Cable clamp
31	48-L 081	Lead
32	48-S 744	Screw
33	48-L 234	Housing cover
34	48-L 083	Cable sleeve
35	48-Z 201	Cord set
36	48-L 192	Field
37	48-L 085	Motor housing
39	48-L 086	Brush assembly
42	48-L 235	Switch
45	48-L 093	Spacer
46	48-L 099	Fan
48	48-M 431	Spacer ring
49	48-L 193	Push button (orange)
50	48-M 425	Spring
51	48-K 110	Washer
52	48-M 426	Locking pin
53	48-L 919	Carbon brush
55	48-K 202	Spacer ring