



No.	Order No.	Description	No.	Order No.	Description
1	32-B 015	Side handle	22	30-B 036	Flange
2	48-L 069	Gear housing	23	48-L 078	Safety guard
3	48-K 340	Hex nut	24	48-L 651	Spacer
4	48-L 070	Pinion/Crown wheel unit	25	48-K 410	Nut
5	48-K 430	Spacer ring	26	48-L 079	Slider
6	48-Q 134	Ball bearing	27	48-L 080	Switch rod
7	48-L 071	Flange	28	48-L 919	Carbon brush
8	48-M 390	Armature	30	48-M 366	Cable clamp
9	48-Q 004	Ball bearing	31	48-S 744	Screw
10	48-L 090	Bearing seat	32	48-L 103	Housing cover
11	48-L 073	Vent plate	33	48-L 083	Cable sleeve
12	48-S 714	Screw	34	48-Z 201	Cord set
13	48-L 074	Clutch assembly	35	48-M 391	Field
14	48-L 093	Spacer	36	48-L 085	Motor housing
15	48-K 163	Spacer	38	48-L 087	Lead
16	48-L 933	Intermediate plate	39	48-L 086	Brush assembly
17	48-L 076	Gear flange	40	48-L 089	Switch
18	48-S 510	Screw	41	48-M 392	Electronic component
19	48-L 077	Grinding spindle	44	48-L 088	Spacer
20	48-S 553	Screw	45	48-L 099	Fan
21	30-B 020	Quick nut	46	48-L 918	Insulating sleeve
	30-B 037	Clamp nut (manual operation)			