



<u>No.</u>	<u>Order No.</u>	<u>Description</u>	<u>No.</u>	<u>Order No.</u>	<u>Description</u>
1	32-B 015	Side handle	25	48-K 410	Nut
2	48-L 069	Gear housing	26	48-L 079	Slider
3	48-K 340	Hex nut	27	48-L 080	Switch rod
4	48-L 070	Pinion/Crown wheel unit	30	48-M 366	Cable clamp
5	48-K 430	Spacer ring	31	48-S 744	Screw
6	48-Q 259	Ball bearing	32	48-L 103	Housing cover
7	48-L 071	Flange	33	48-L 083	Cable sleeve
8	48-M 390	Armature	34	48-Z 201	Cord set
9	48-Q 260	Ball bearing	35	48-M 391	Field
10	48-L 090	Bearing seat	36	48-L 085	Motor housing
11	48-L 073	Vent plate	38	48-L 087	Lead
12	48-S 714	Screw	39	48-L 086	Brush assembly
13	48-L 074	Clutch assembly	40	48-L 089	Switch
14	48-L 075	Spacer	41	48-M 392	Electronic component
15	48-K 163	Spacer	44	48-L 093	Spacer
16	48-L 933	Intermediate plate	45	48-L 099	Fan
17	48-L 076	Gear flange	46	48-M 431	Spacer ring
18	48-S 510	Screw	47	48-L 918	Insulating sleeve
19	48-L 077	Grinding spindle	48	48-L 193	Push button (orange)
20	48-S 553	Screw	49	48-M 425	Spring
21	30-B 020	Quick nut	50	48-K 110	Washer
	30-B 037	Clamp nut (manual operation)	51	48-M 426	Locking pin
22	30-B 036	Flange	52	48-L 919	Carbon brush
23	48-L 078	Safety guard	55	48-K 202	Spacer ring
24	48-L 651	Spacer			