



<u>No.</u>	<u>Order No.</u>	<u>Description</u>	<u>No.</u>	<u>Order No.</u>	<u>Description</u>
1	32-B 015	Side handle	30	48-S 744	Screw
2	48-L 069	Gear housing	31	48-L 145	Housing cover
3	48-K 340	Hex nut	32	48-L 083	Cable sleeve
4	48-L 222	Pinion/crown wheel unit	33	48-Z 201	Cord set
5	48-K 203	Spacer ring	34	48-L 196	Field
6	48-Q 259	Ball bearing	35	48-M 396	Sensor
7	48-L 071	Cover	36	48-L 139	Motor housing
8	48-M 393	Armature	37	48-L 919	Carbon brush
9	48-Q 027	Ball bearing	38	48-L 086	Brush assembly
10	48-L 090	Bearing seat	40	48-L 197	Electronic component
11	48-L 092	Vent plate	41	48-M 399	Connector
12	48-S 714	Screw	42	48-L 141	Switch
13	48-L 074	Clutch assembly	43	48-M 400	Plastic lens
14	48-L 075	Spacer	45	48-L 099	Fan
16	48-L 933	Intermediate plate	47	48-M 403	Spacer
17	48-L 194	Gear flange	48	48-M 404	Sealing flange
18	48-S 510	Screw	49	48-L 193	Push button
19	48-L 077	Grinding spindle	50	48-M 425	Spring
20	48-S 553	Screw	51	48-K 110	Washer
21	30-B 020	Quick nut	52	48-M 426	Locking pin
	30-B 037	Clamp nut (manual operation)	53	48-L 919	Carbon brush
22	30-B 036	Flange	54	48-L 199	RPM sensor
23	48-M 215	Safety guard	55	48-S 101	Screw
25	48-L 651	Spacer	57	48-M 431	Spacer
27	48-L 079	Slider	59	48-L 205	Insulating sleeve
28	48-L 094	Switch rod	60	48-K 202	Spacer ring
29	48-M 366	Cable clamp			